

USER INFORMATION

FIREARM & WILD2 SAFETY WARNING

Your INFORCE WILD2 is designed for use with destructive weapon systems. Improper operation or misuse of the INFORCE WILD2 with these weapons may lead to personal injury or death of the operator or others within the weapon's range. Safe firearms handling procedures must be practiced at all times.

Before handling a weapon with the INFORCE WILD2 attached, read and understand the entire contents of the weapon's manual and the INFORCE WILD2 instructions, especially the safety precautions and procedures for safe firearms handling. Always practice safe firearms handling techniques. Failure to comply with correct safety precautions and safe firearms handling techniques may result in serious injury, damage to property, or death.

- Never point the firearm at anything or anyone that you don't intend to shoot.
- Always keep your finger outside the trigger guard and off the trigger until you are ready to fire the weapon.
- Always verify that the chamber of the weapon is empty or "clear" before attempting to mount or dismount the INFORCE WILD2.

Follow the cleaning procedures as set forth in the manual of your firearm. Always remove the INFORCE WILD2 from the firearm when performing maintenance, cleaning, or replacing the battery. Do not operate the INFORCE WILD2 around flammable/combustible materials or in flammable atmospheres involving evaporated gasolines, or where paints, solvents, or other flammable liquids are stored.



For warranty information please visit www.inforce-mil.com

INFORCE.

**USER MANUAL:
WILD SERIES**

WILD2

INFORCE-MIL.COM

FUNCTIONS

WILD2 LIGHT OPERATION

The INFORCE WILD2™ features a patented ambidextrous switching paddle system for easy operation. The paddles are positioned naturally and facilitate transitional finger movements from pistol to paddle switch to the trigger.

Constant

Quickly press either paddle to turn the light on. Pressing either paddle again will turn the light off.

Momentary

Press and hold either paddle for more than ½ second. Release pressure off paddle to turn light off.

Strobe

Check if strobe is enabled by double tapping one paddle. If the light does not strobe then continue.

Open battery door. Press both paddles while simultaneously closing battery door and slightly depressing battery release button, then release paddles. Check if strobe is functioning by double tapping one of the paddles. Strobe is now enabled.

Repeat procedure to disable strobe.

MAINTENANCE

CLEANING INSTRUCTIONS

INFORCE WILD2 requires minimal maintenance from time-to-time. See weapons handling safety instructions.

1. Clean contact surfaces (1, 2) of head and body with alcohol swab.
2. Apply thin coat of silicon-based lubricant to rubber o-ring (3) of tail. DO NOT USE A PETROLEUM-BASED LUBRICANT.

 
 
LOCKOUT SYSTEM

To lockout:

1. Press and hold either paddle followed shortly by the second paddle.
2. Hold both depressed until the light blinks 4 times. You are now in lockout mode and the paddles will not turn the light on.

To enable:


Follow the Lockout procedure until the light blinks 2 times. You are now able to activate the light with the paddles.

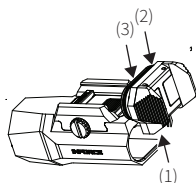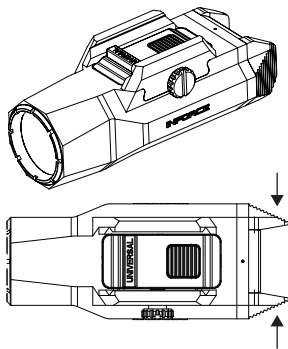


If light becomes dirty from dust, sand, etc... tighten door back fully, rinse with water, and dry with a soft cloth.

OPERATION

 
MOUNTING WILD2 TO RAIL

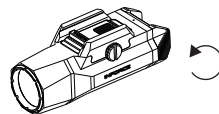

 1. Unscrew the clamp until it is free from the body.

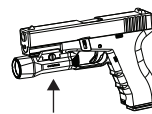

 2. Place INFORCE WILD2 rail into desired pistol groove.

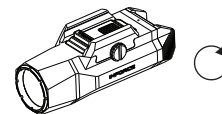


3. Tighten clamp screw until it grabs the rail, firmly. Double check that the light is secure on the firearm.

To dismount, simply unscrew the clamp screw and remove the light from the firearm. Be sure to put the clamp back on the light when storing so that it is not lost or damaged.

UNIVERSAL RAIL


To change rail bar:

 - Completely loosen clamp and remove from body. Remove rail bar and rotate it to opposite orientation. Slide back into groove and the clamp back into place.
- Tighten screw until clamp is secured to the body.

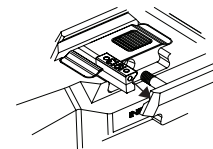

BATTERY REPLACEMENT

 1. Remove light from firearm before replacing batteries.
2. Depress button on top surface of light. Battery door will pop out slightly.
3. While holding button, pull battery door out the rest of the way and rotate 180°.
4. Insert two 123A batteries in the orientation shown.
5. Rotate battery door back 180°.
6. Push battery door back into place until it clicks.

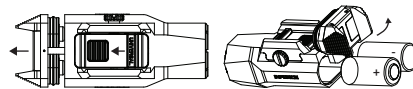

WARNING: Lithium batteries can explode or cause burns if recharged, shorted, disassembled, exposed to water or high temperatures of fire. Follow battery manufacturer's guidelines for safe storage, use and disposal. If light has been submerged, dry exterior of light prior to replacing batteries. Fresh and salt water will damage internal electronics and batteries.

Do not use counterfeit or inferior quality batteries, as they do not meet safety and performance standards and may cause personal and property damage. Ensure safety and performance by purchasing established brands, such as: Duracell, Energizer, or Panasonic.